


Important Safeguards

- 1.This product is a food processor with rechargeable battery. Please fully charge it before first use.
2. To make sure that the blade is installed in place to rotate freely before adding ingredients,.
3. Do not use sharp objects to scratch the machine.
4. It is strictly forbidden to over load the machine.
5. Never put the machine into a microwave oven to heat or freeze in the refrigerator to avoid damage to the machine. The bowl can be sterilized and cleaned with boiling water at 100 °C.
6. This product cannot be used to process hard food, such as coffee beans, soybeans, gelatin, rice, ice cubes or frozen food, vice versa.
- 7.It is strictly forbidden to touch the detachable parts such as blades and motors(the detachable parts) during processing, to avoid any injury or damage.
8. Do not continually work for more than 30 seconds. After a continually processing 30 seconds, it must rest the machine for 2 minutes before next round. It should work for a cycle of 2 minutes in an interval of 30 seconds. After three consecutive cycles, the machine must be cooled down for at least 30 minutes before next processing in order prolong the lifespan.
9. The blades are very sharp. Do not touch the edge directly with your hand. When removing or installing the blade, hold the top of the rod connecting to the tool holder.
10. Do not use steel wool, abrasive cleaners or corrosive liquids such as petrol or acetone to clean the product.The product can be rinsed directly with clean water (except for the head).
11. Do not put any parts of this machine into the dishwasher.
12. Store the product in a place that is not accessible to children. Do not allow persons (including children) with physical, sensory or mental disabilities or lack of experience and knowledge to use or play with the product.
13. This product is for personal or household use only and not for commercial use.
- 14.Cautions: Be careful when removing the blade, emptying the cleaning bowl.Be careful when cleaning, avoiding hands injured by the blade.

3

USB Mini Food processor User manual

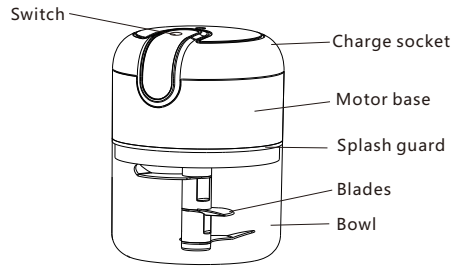

Please read the manual carefully before using the product and keep it properly

Using Your Mini Food processor

1. Before first use , do plug and fully charge the unit, and the red light 's on when charging while off if full. Clean the blade, chopping cup and splash guard(lid) before the first use.



- 2.Insert the chopping blade onto the centering shaft in the processing bowl. Be careful when handling the sharp blades. Add food to be processed into the glass processing bowl(below the max line).



- 3.After then insert the lid onto the bowl, then put the motor head on and zip to the lid on place. Push the switch and start to process the good. The blades will be blocked if it is over loaded when start. Do reduce the amount of the food then go on.



4. Release the switch about 15 seconds after one cycle processing. Please continue to press and push the switch for another cycle if the food is not fine enough. After processing, remove the motor head, and then take off the splash guard from cup, pour out the food. Do cleaning on the blades,splash guard and bowl.

1

Specification parameters

Product	USB Mini Food processor
Bowl Capacity	≈250ML
Rated Voltage	3.7V==
Rated Current	10A
Charging Voltage	5V ==
Charging Current	0.3A
Standard	GB47061.1-2005 GB4706.30-2008

Maintenance and maintenance

1. Clean the splash guard, blades and cube immediately after using the product.
2. Do not rinse the motor head directly with water while cleaning; only use a soft warm cloth to wipe the outside of the head when cleaning.
3. When cleaning, put appropriate amount of detergent in clean water and clean it with a cleaning pad, better cleaning with warm water.
4. The blades are very sharp and must not be touched by hands. To avoid injuries, the water should be very clear so that you can see the blades during the cleaning process.
5. Do not use abrasive or corrosive cleaning agents for cleaning.
6. It is strictly forbidden to sterilize all parts of this product at high temperature.
7. After cleaning the product, dry out all of the parts before reassembling.And store the machine in good place
8. If the product is not used for a long time, please charge and maintain the product within three months.

2